




RTX RangePoint

Setup guide for:



CNHi PRO700/IntelliView IV – AG-372

Setting up the correction signal

Setup RangePoint RTX – Changing Frequency & Baud Rate

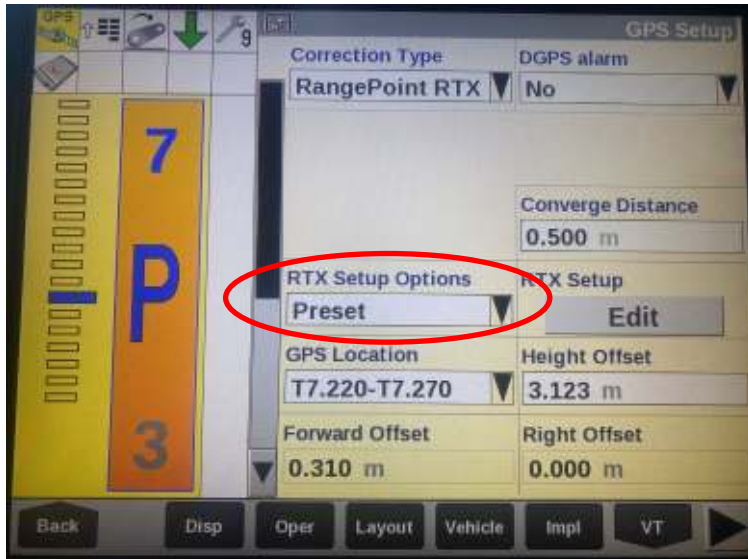


- Select Toolbox -> GPS
- Select RTX Setup Options
- Select Custom
- Select RTX Setup

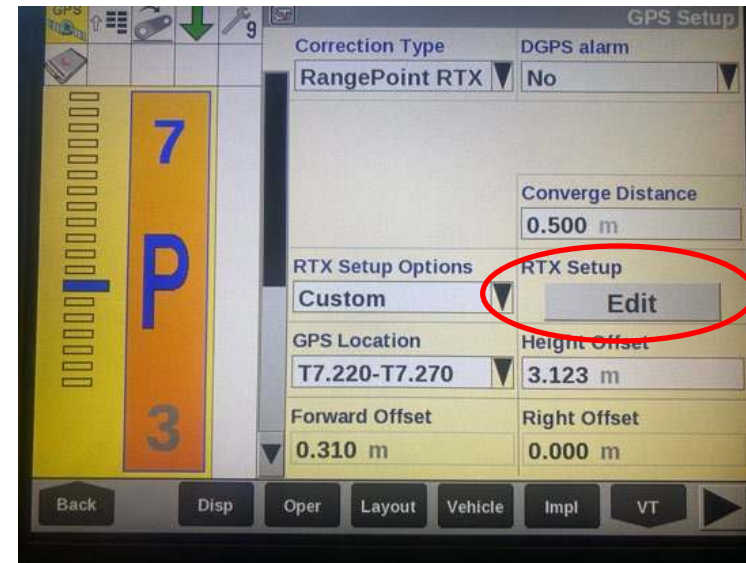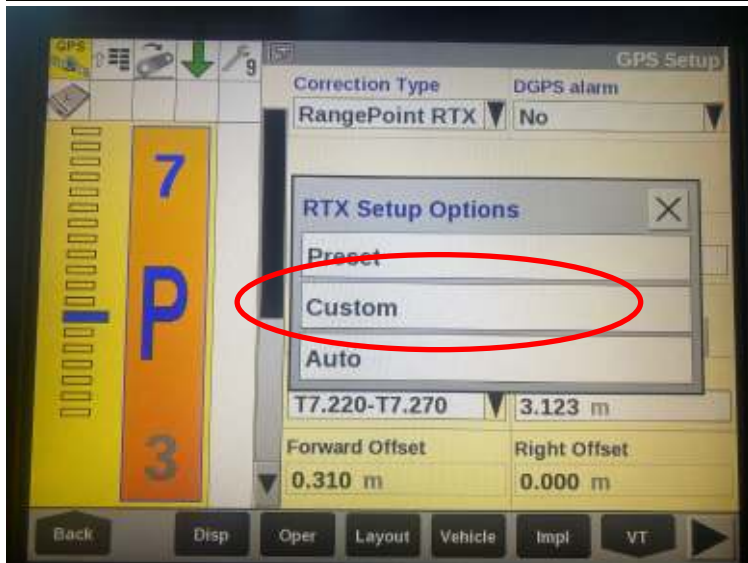


Setting up the correction signal

Setup RangePoint RTX – Changing Frequency & Baud Rate

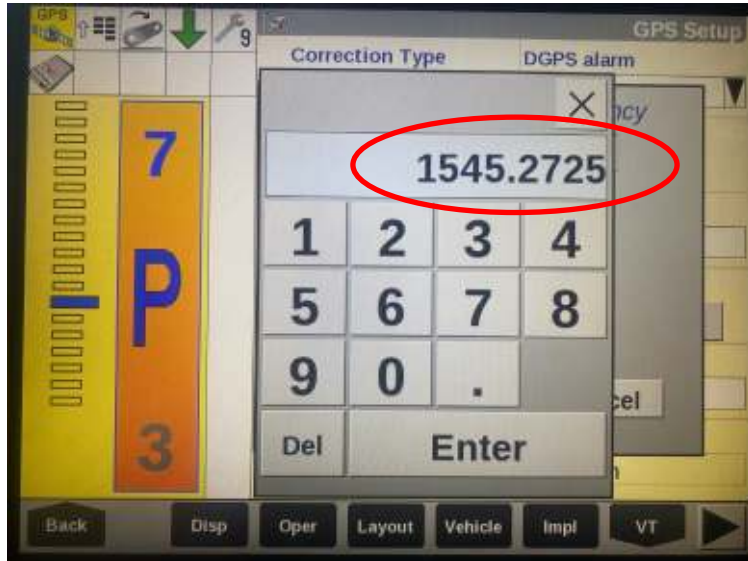

- Enter the new Frequency - **1545.2725**

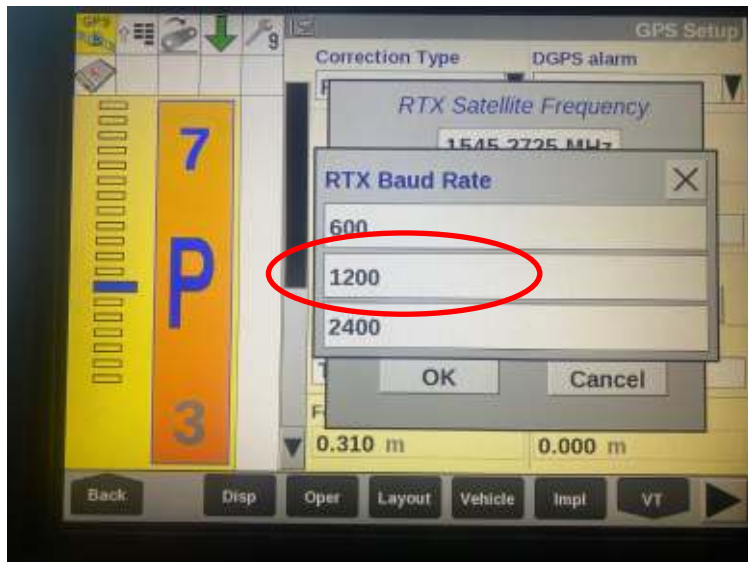

- Select new Baud Rate – **1200**