




# xFill Setup – RTK/VRS

Setup guide for:  
Trimble FMX/TMX (FMX+)  
CNHi FM-1000/XCN-2050 (FM-1000+)

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

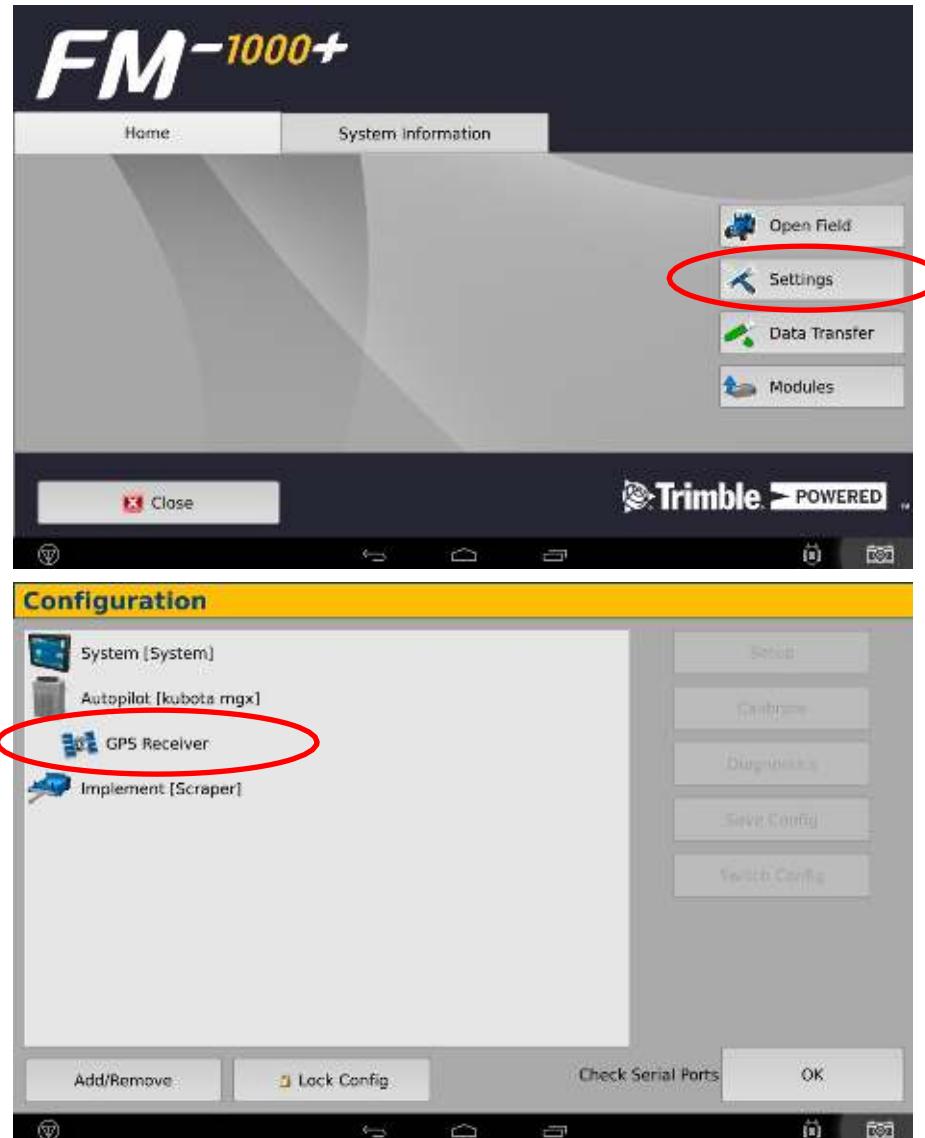


- Go to the homepage
  - Select Settings


- Select GPS Receiver

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

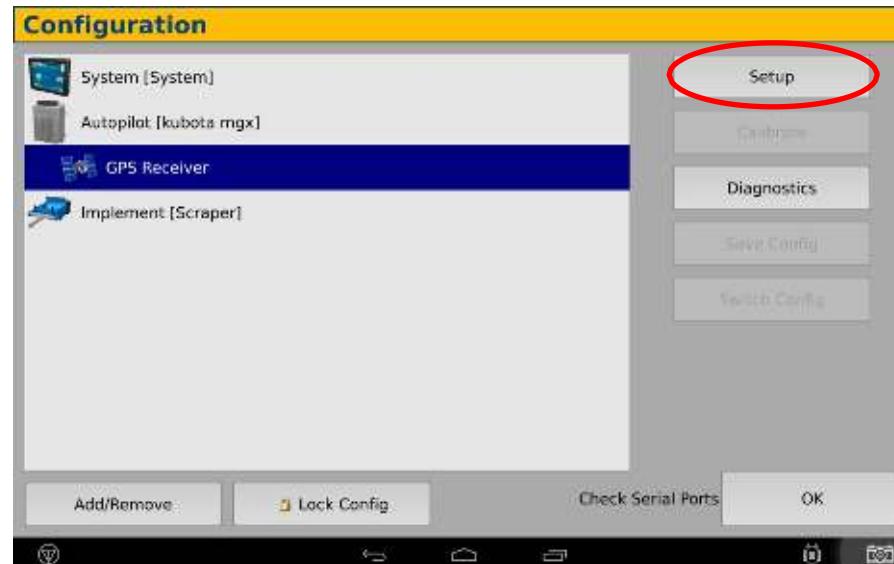


- Select Setup

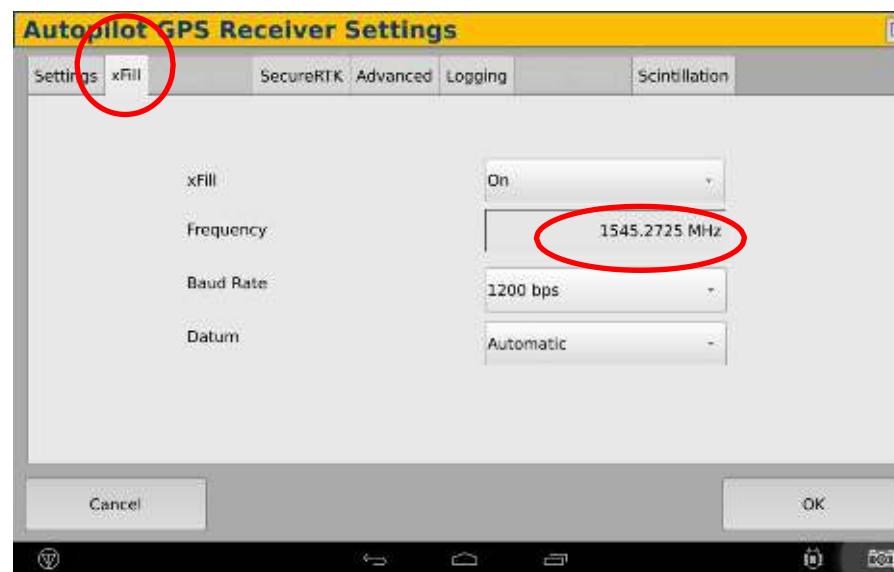

- Select xFill
  - Select Frequency

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

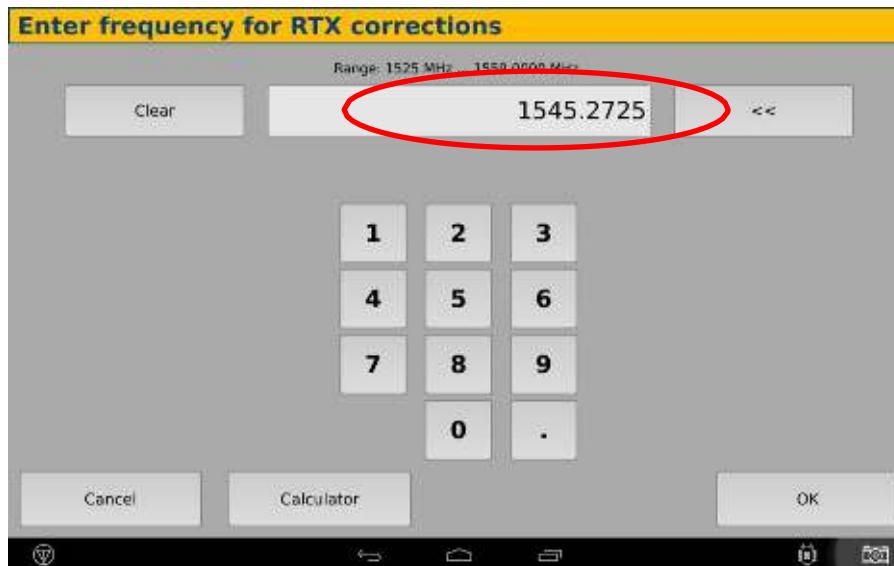

- Enter the NZ Frequency - **1545.2725**
  - Select **OK**
- Select the NZ Baud Rate – **1200**
- Select **OK**

