



xFill Setup – RTK/VRS


Setup guide for:

Trimble GFX-750 & TMX (Precision IQ)


CNHi XCN-1050 & XCN-2050 (Precision IQ)

Setting up the correction signal

Setup xFill RTK/VRS – Configuration

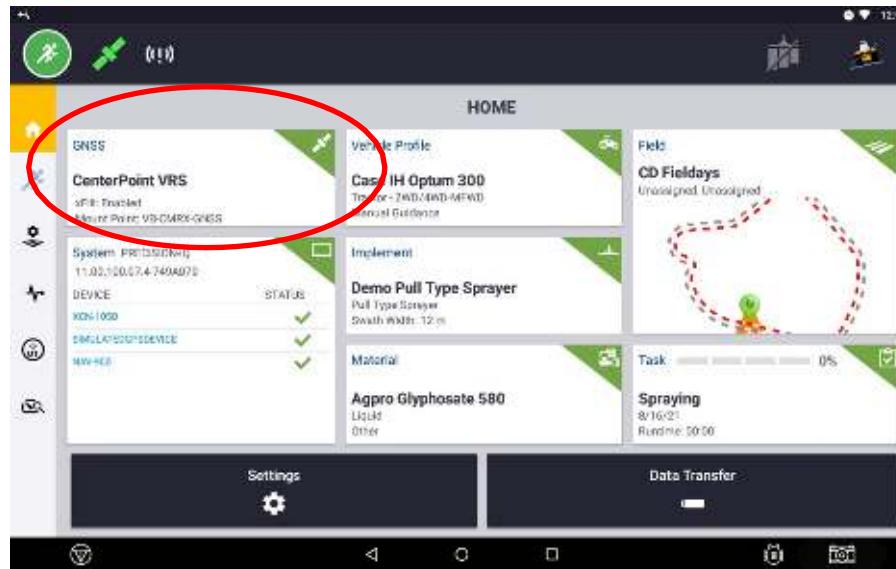


- On the homepage of Precision IQ Select GNSS.

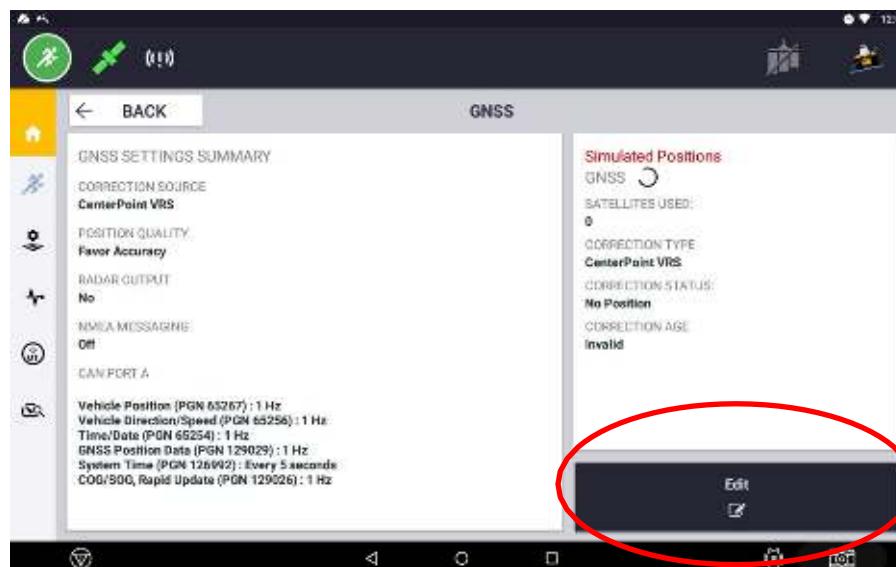


- Select Edit

Setting up the correction signal

Setup xFill RTK/VRS – Configuration

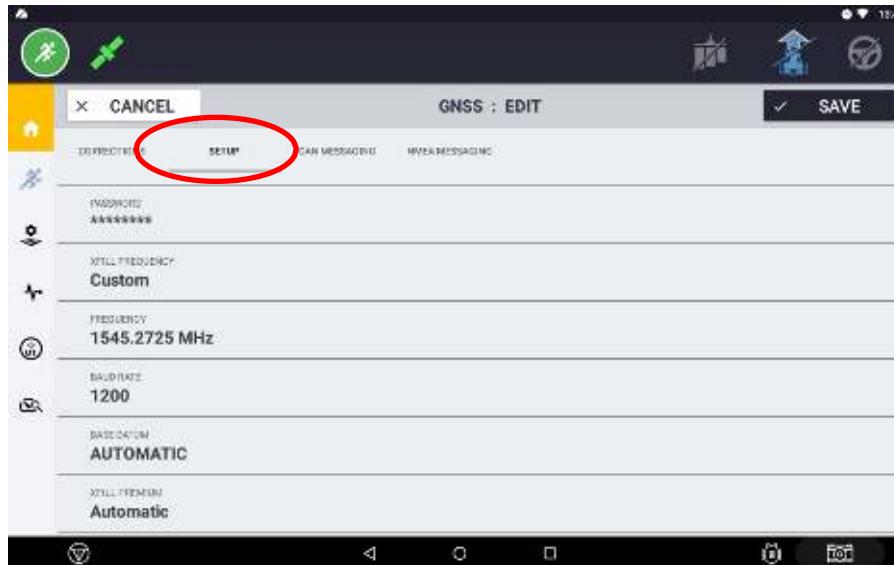



- Select Setup

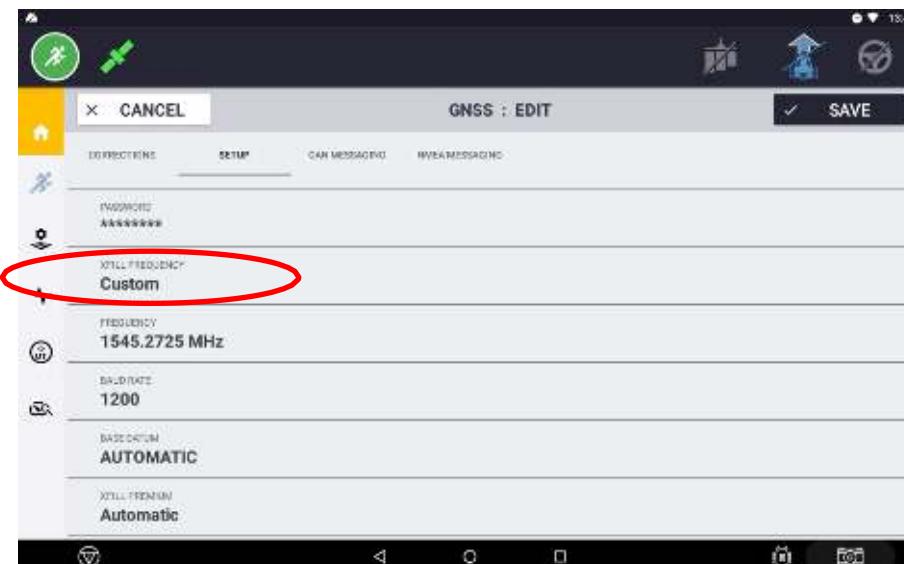

- Select xFill Frequency
 - Select Custom

Setting up the correction signal

Setup xFill RTK/VRS – Configuration

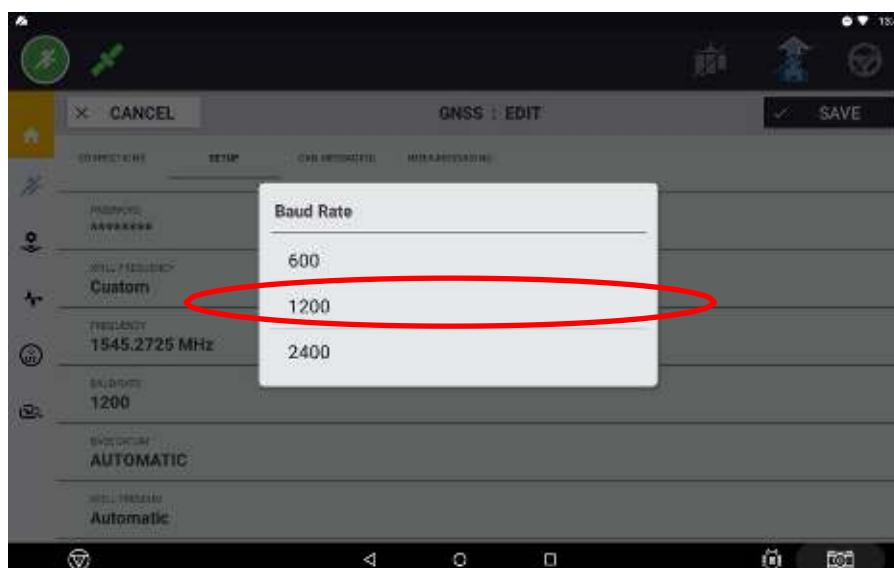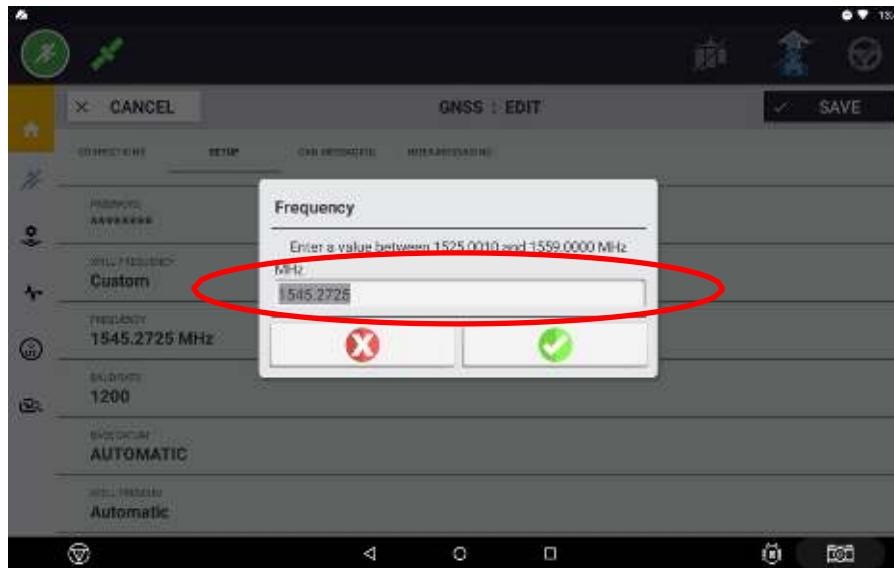

- Enter the NZ Frequency - **1545.2725**
- Select the NZ Baud Rate – **1200**
- Select Save

