



# xFill Setup – RTK/VRS


Setup guide for:

Trimble GFX-750 & TMX (Precision IQ)


CNHi XCN-1050 & XCN-2050 (Precision IQ)

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

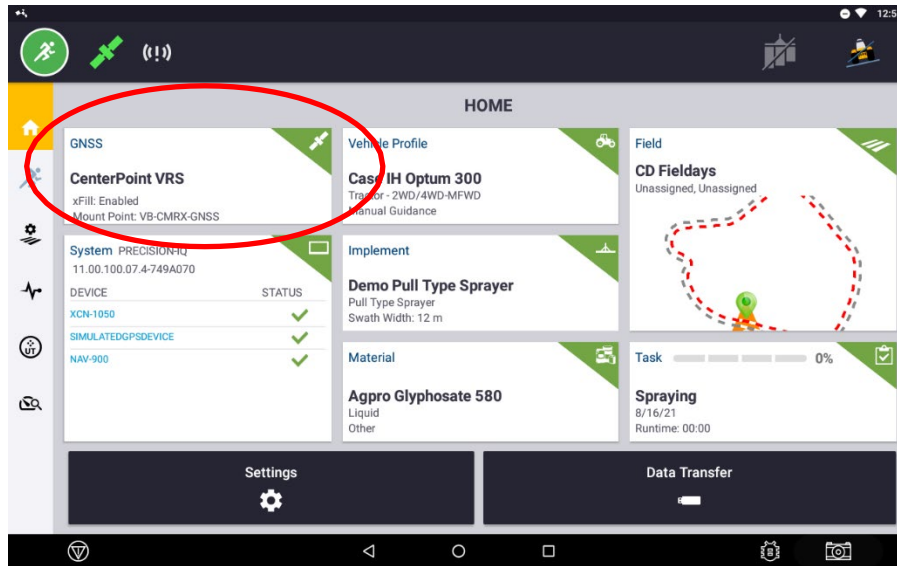


- On the homepage of Precision IQ Select GNSS.

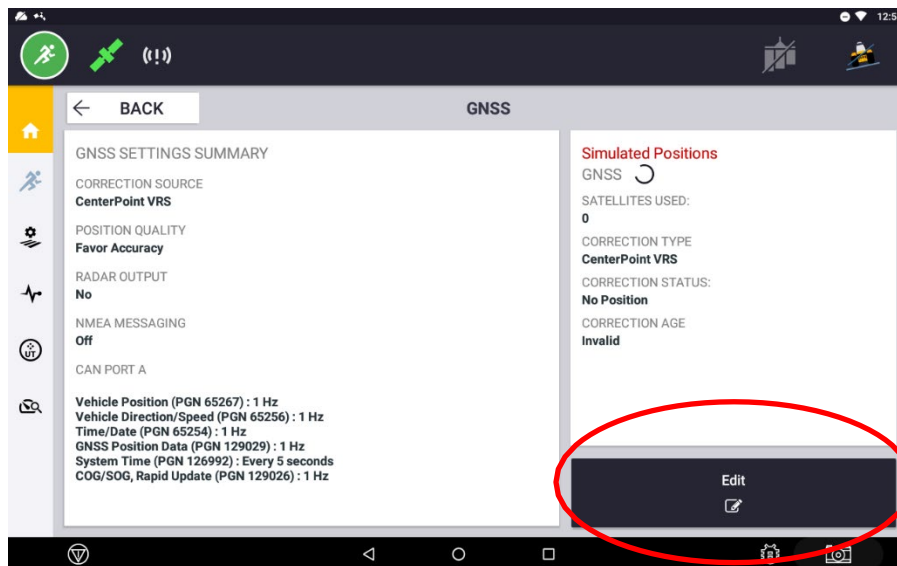


- Select Edit

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

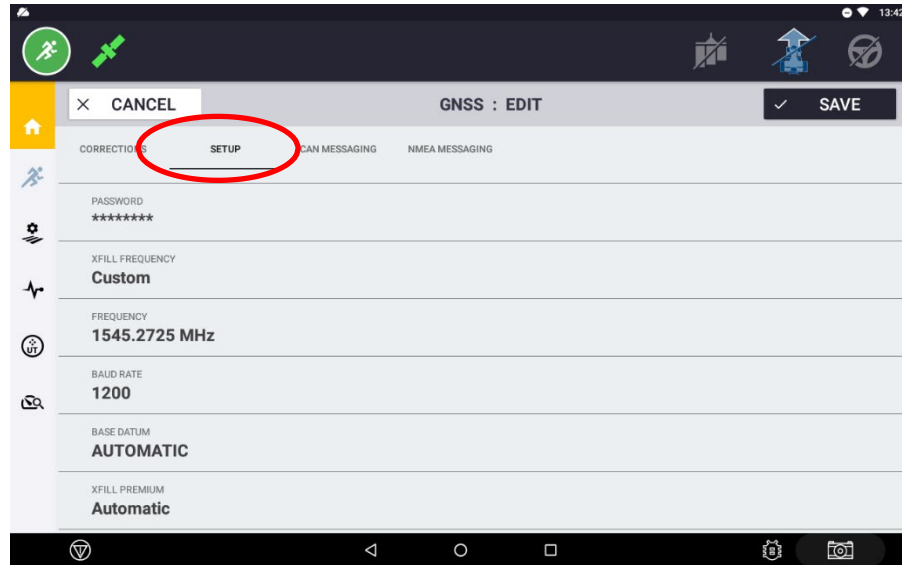

- Select Setup

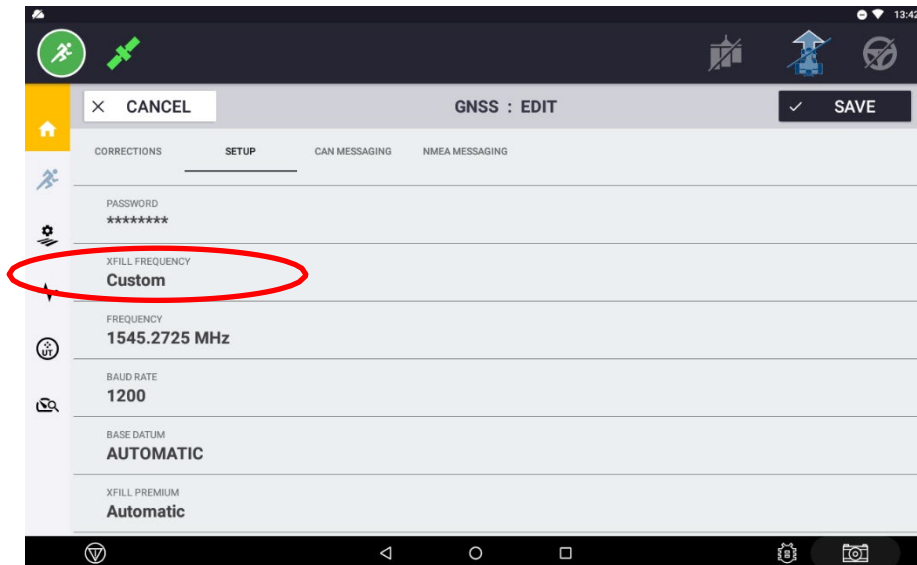

- Select xFill Frequency
  - Select Custom

# Setting up the correction signal

## Setup xFill RTK/VRS – Configuration

- Enter the NZ Frequency - **1545.2725**
- Select the NZ Baud Rate – **1200**
- Select Save

