




# RTX RangePoint


Setup for Trimble FMX/FMX+ (TMX Display)  
CNHi FM1000/FM1000+ (XCN-2050 Display)

# Setting up the correction signal

## Setup RangePoint RTX

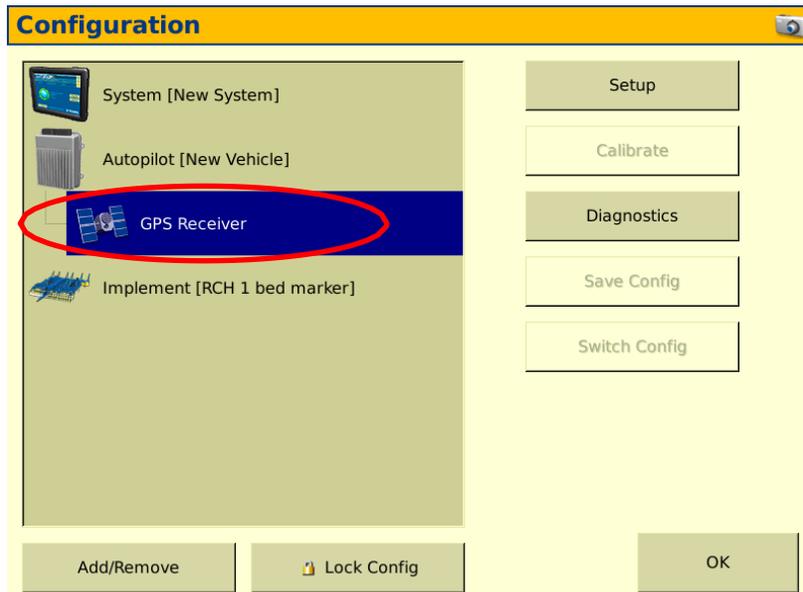


- On the homepage – Select Settings
- Select GPS Receiver -> Next

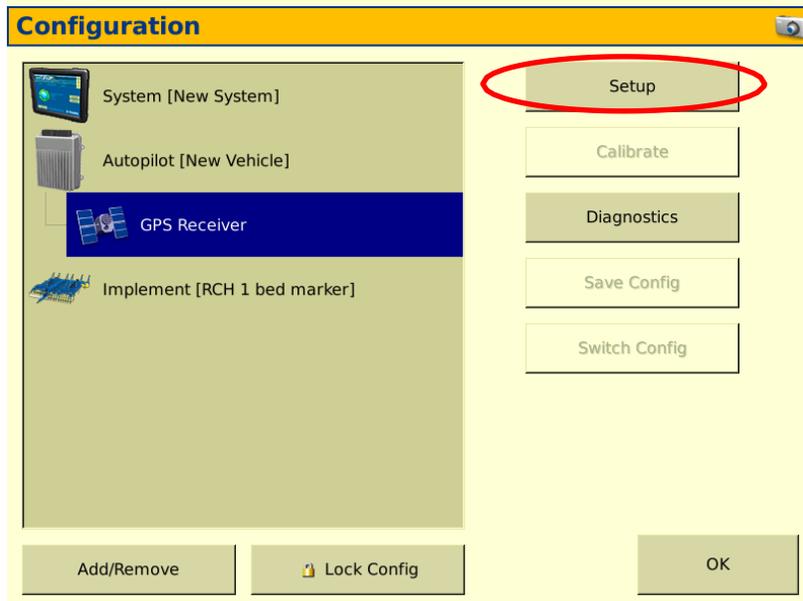


- Select Setup ->

# Setting up the correction signal

## Setup RangePoint RTX

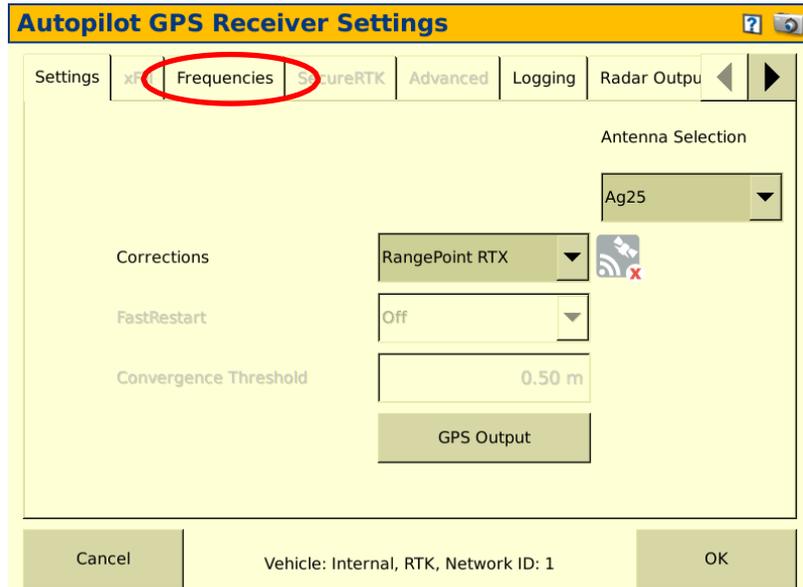

- Select Frequencies
- Select GPS Receiver -> Next

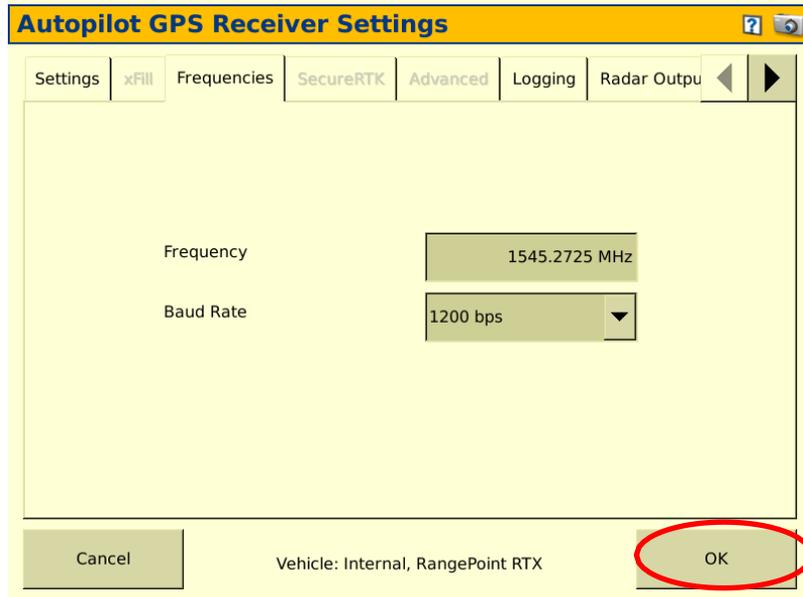

- Enter new Frequency -> **1545.2725**
- Select new Baud Rate -> **1200 bps**
- Select -> **OK**