




# xFill – RTK/VRS


Setup for Trimble FMX/FMX+ (TMX Display)  
CNHi FM1000/FM1000+ (XCN-2050 Display)

# Setting up the correction signal

## Setup xFill – RTK/VRS

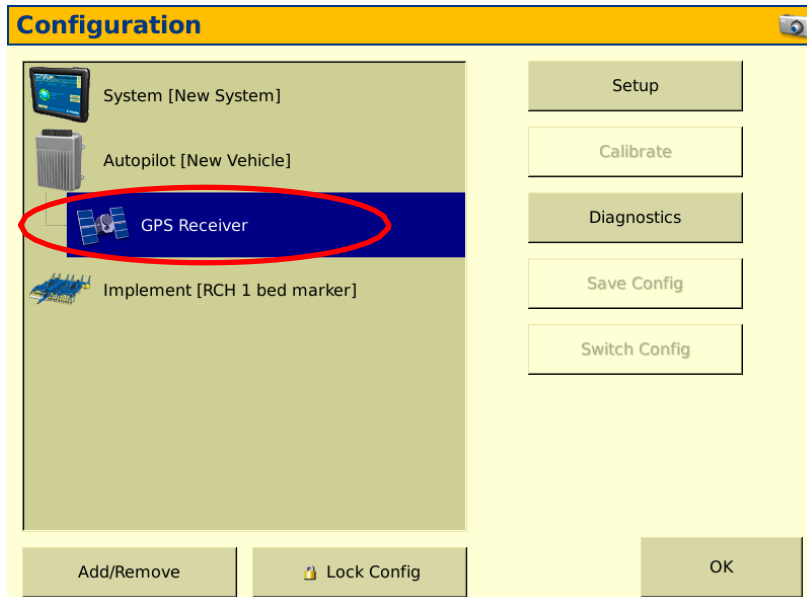


- On the homepage – Select Settings
- Select GPS Receiver -> Next

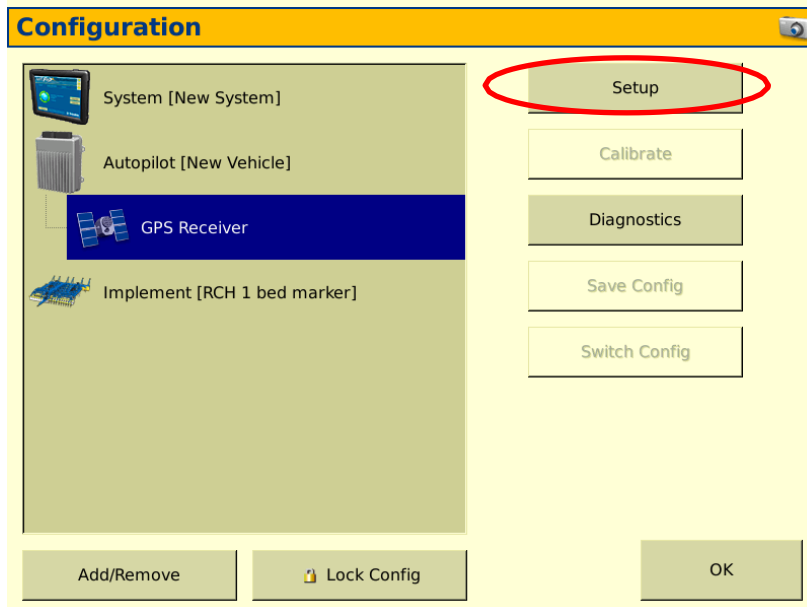

- Select Setup ->


# Setting up the correction signal

## Setup xFill – RTK/VRS

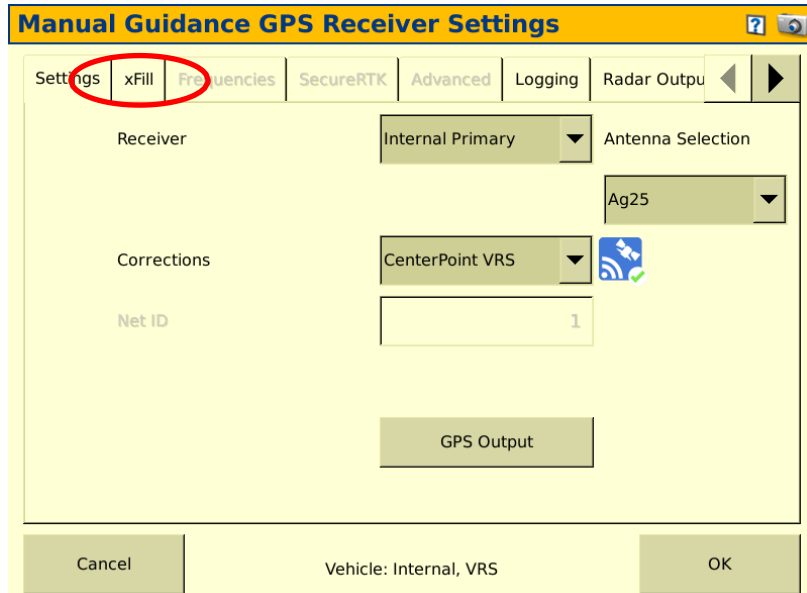

The screenshot shows the 'Manual Guidance GPS Receiver Settings' dialog box with the 'xFill' tab selected. The 'Settings' tab is also circled in red. The 'Receiver' dropdown is set to 'Internal Primary' and 'Antenna Selection' is 'Ag25'. The 'Corrections' dropdown is set to 'CenterPoint VRS'. The 'Net ID' text box contains the number '1'. A 'GPS Output' button is visible at the bottom. The 'Vehicle' status is 'Internal, VRS'. 'Cancel' and 'OK' buttons are at the bottom.

- Select xFill

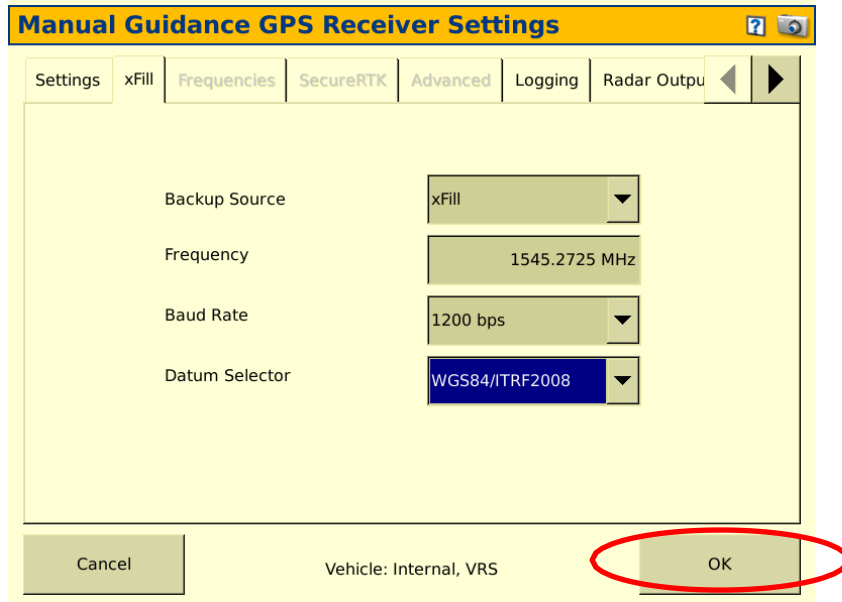

The screenshot shows the 'Manual Guidance GPS Receiver Settings' dialog box with the 'Frequencies' tab selected. The 'Backup Source' dropdown is set to 'xFill'. The 'Frequency' text box contains '1545.2725 MHz'. The 'Baud Rate' dropdown is set to '1200 bps'. The 'Datum Selector' dropdown is set to 'WGS84/ITRF2008'. The 'OK' button at the bottom is circled in red. The 'Vehicle' status is 'Internal, VRS'. 'Cancel' and 'OK' buttons are at the bottom.

- Backup Source -> xFill
- Enter new Frequency -> **1545.2725**
- Select new Baud Rate -> **1200 bps**
- Enter Datum -> **WGS84/ITRF2008**
- Select -> **OK**